

REFLECTING COLT TRADITION OF FINE CRAFTSMANSHIP SINCE 1836

Colt announces its famous autoloading .22 rifle action in an all new design, the Courier.

The shooting comfort of a pistol grip type stock and streamlined appearance of a tapered, hand-filling fore-end....both of solid walnut, combine to deliver a thoroughly modern .22 autoloader of exceptional reliability.

Lightweight . . . 4% pounds. Receiver dovetail grooved for tipoff scope mount. Shoots .22 long rifle, standard or high velocity ammo. Here's a rifle you'll be proud to own. Made in Hartford, Conn. by Colt craftsmen.



GENERAL OPERATING INSTRUCTIONS

Ammunition—Shoots all .22 long rifle ammunition, regular or hi-speed,

Safety—The Safety button (43) is located at the rear of the trigger guard (64). Slide Safety button from left to right to lock in "safe" position. Slide Safety button from right to left for "fire" position. When Safety button is in "fire" position, a band of red appears on the button, indicating the rille is ready to fire.

OPERATION

To Load—Grasp magazine cap (31) and turn counterclockwise to release. Withdraw inner magazine tube from outer magazine tube until the loading port in outer magazine tube is open. Load from one to 15 cartridges in loading port, then push inner magazine tube back into position and lock.

Chamber may now be loaded by pulling cocking handle (41) to its extreme rear position and allowing it to go forward to closed position. After loading chamber, one more cartridge may be fed into the magazine for full fire load of 16 shots.

The gun may now be fired by pulling the trigger. Only one shot will fire with each pull of the trigger. Trigger must be released and pulled again for each additional shot.

ALWAYS keep Rifle on Safe until you are ready to fire it.

To Unload—Put Rifle on "Safe". Remove inner magazine tube and point muzzle down so that cartridges will slide out of magazine tube. Retract bolt to extract round in chamber, Check magazine throat before closing bolt to make sure there is not an additional cartridge in position to feed into chamber.

Replace inner magazine tube, then open and close the bolt several times while looking in the ejection port to make sure there are no cartridges in the magazine, and that the chamber is empty. Always treat the rifle as if it were loaded, even when you are sure it is empty.

To Disassemble—Check rifle to make sure it is not loaded. Remover inner magazine tube (33). Remove forearm screw (16). Remove forearm. Drive out pin (65). Pull back cocking handle to extreme rear. With both in this position, trigger guard assembly can be removed by pulling out just forward of the trigger guard. Bolt can then be removed by pulling back slightly on the cocking handle and pulling both out thus bottom of receiver. Both spring assembly (41) may now be removed easily. To function properly, moving parts should be kept clean and free of powder residue and oited very lightly.

We do not recommend disassembly beyond this point, except by qualified persons or gunsmiths.

Do not null trigger while trigger quark is removed from title

Do not pull trigger while trigger guard is removed from rifte as this puls undue strain on hammer and hammer stop pin. Reassemble rifle by reversing the above procedure.


Sighting—Your rifle has been sighted at the factory to hit point of aim at 50 yards. We recommend that you sight in your rifle personally to compensate for a possible difference in sighting vision. The rear sight is adjustable for both windage and elevation,

COURIER 22 AUTOLOADER


PISTOL GRIP STOCK - stock and foreend made of solid American walnut. REPEATING MECHANISM - a highly reliable semiautomatic repeating mechanism. The ultimate rifle, ideal for small game, varmints or just plain plinking.

SIGHTS - Western style open rear sight adjustable for elevation and windage, hooded hold bead front sight. Receiver grooved for "tip-off" scope mounting.

CROSS BOLT SAFETY - a positive safety lock, shows red when safety is OFF and rifle is ready to fire.




Hooded Gold Bead Sight. Tubular magazine holds 15 rounds.

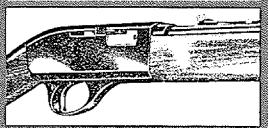

View of automatic repeating mechanism, open rear sight and safety.

To disassemble the Courier .22 beyond the point described under "General Operating Instructions," the rifle should be brought to a qualified gunsmith, as would be done with any fine firearm.

Under terms of Warranty, Colt responsibility to the owner is limited to the extent that such disassembly be performed only by Colt Custom Repair Department.

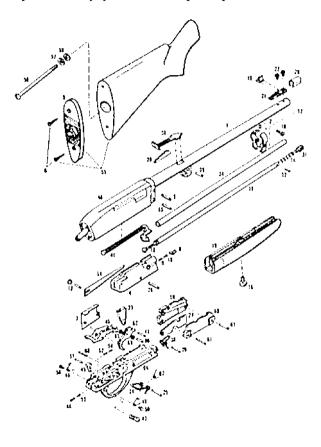


Reference numbers are for illustration purposes only.
Use part numbers when ordering parts.

PARTS LIST

DHAW. NO.	HAME OF PART	PART NO
1	Barrat Acceptly	80970
7	Barnt Band Fin	95114
3	Berti Rituserg P.a.,,,,	\$\$123
4	6×1	83124
5	Burt Mate	80081
Ε	East Plate Screw (2 used)	93591
	Euri Stock Assembly	\$331 6
7	Ejector Assembly	50222
8	Estrattet	£8332
9 10	Extractor Spring	89158 83159
11	Entraptor Spring Hunger Enting Pin	80123
12	Long to Retroop to	95008
13	followin	82123
14	Followin Spinia	20120
15	Forestra	20130 1E103
16	foreum Screw	20132
17	Front Earl L. II.	73115
17	Front Band R H	70116
18	Front Pard Sarew	87375
19	Front Sedit Bezd	20331
20	Front Sight Hood	80351
21	Front Soft	80350
22	Frent Sight Screw	E1203
23	Hammer	£3133
24	Hammer Soung	83130
25	Hammer Spiring Pin	£3105
27	Litter	20135
2.3	Lifter Cam Pan	95143
23	Littu Pin	55003
33	Litter Spring	£0135
31	Masarine Tube Cap	63133
32	Usgazine Tube Cap Pin	55007
11	Magazine Tube, Inner	63137
34	Magazora Tuba, Outer	£2323
35	Unjunge Tabe fletning für	95704
35	Rear Sont Leaf	94119
31	Rear Sophi Circuita	94062
40	Reserver	
41	Recoil Spaing Assembly	69243
43	Salety	E9143
44	Safety Outcot Spring	60317
45	Seat	80897
45	Sest But	£3146
47	Sex Bir 65	80305
43	Scar But Spring L II.	EQ316
43	Star Bar Spring It II.	14103
50	See But Spring Pin	83345
51	Sear and Sear Ear Retaining the	E0305
52	Stat Betrat Spring	60148
53	Salaty Sperg Ortist	80144
54	Sear Spring British	1103
\$6	Stock Bolt	93501
57	Stock Bots Lock Waster	93002
53	Stock Bott Weither	93202
53	Detail L.B.	E0151
60	Thygas B H	60159
61	Threat for (2 used)	E3321
6.7	Irgge Augoby	60301
63	Troppe Buthing (Zuted)	E0155
C4	Triggir Guird	60153
65 66	Tripper Goard Pea	6920J
67	Traypo Por	95003
67	Fragget Spring	£0303

FOR THE FINEST IN SHOOTING EQUIPMENT - OLT since 1836



STAGECOACH .22 AUTOLOADER

This rille is styled after the heavier caliber carbines of the old west. Behind this picturesque styling is the newest semi-automatic repeating mechanism modern technology has produced. Other features include western style open rear sight, black walnut stock and fore-end, saddle ring and roll engraved frame. A fast rugged, accurate .22, every inch the ouldoorsman's rifle.

SINGLE ACTION ARMY REVOLVER .45 Colt. 357 Magnum. The original "Peacemaker" designed by Colt that helped win the West. Features case hardened frame; blued barrel, cylinder, trigger guard and backstrap; standard square butt. Rugged, dependable for hunter or camper.

